

Leafy Spurge Sprayer

Operating Instructions



Spray Nozzles

Spray Nozzles

- At 5.5 mph and a pressure of 40 psi you will be spraying 47 feet.
- Approximately 20 Gallons per acre
- **When spraying use clean water and Sprayer should be cleaned before being brought back.**

- Water tank holds 400 (US gallons of water)



Water Pump is hydraulic driven off the tractor.
The yellow valve regulates the flow of water to the pump.



- Sprayer control should be set on RL in order to spray with both booms.
- You can spray separately by using the R setting for the right side and L setting for the left side.

Water
Valve

Pressure
Gauge

Flow
Regulator



- The Pressure gauge ideally should be run at 40 PSI Located in the picture above.
- The flow regulator on the right hand side of the picture can be controlled by turning tighter to allow for more pressure or loosening for less.
- The yellow valve allows water through when open and stops the flow when closed.